

NVY works continuously to make its customers understand every aspect of the product. This helps our customers to get to use the product with the best efficiency and the user can take maximum advantage of the product without going through the hassles of calling the customer care or logging a complaint.

Our products are different, unique, technologically advanced and tech-savvy so we understand the need of providing product knowledge to our customers. NVY has therefore added pictorial graphics of the actual products used and accessories used to make sure that the customer can understand the usage of the product and its accessories. NVY is working at continuously updating the tutorials for its customers.

HOW TO USE MAGIC REMOTE ON NVY SMART TVs

Dear Customer,


This guide will help you to understand and use the Magic Remote for NVY SMART TVs. This is a simple and user-friendly remote and any one can use it well without any issues.

TO USE THE REMOTE, FIRST OF ALL, WE NEED TO KNOW THE BELOW POINTS FOR FUNCTIONING OF THE REMOTE.

- The Remote control can be used only after the dongle (USB Dongle) is inserted into the TV. The USB Dongle can be found at the back of the remote control inside the back cover of the remote.



- The Remote works on plug 'n' play and you do not need to press any button after putting in the USB of the remote into the socket. After plugging in the remote into the USB 2.0 socket, the cursor shall be seen automatically.
- The Centre Android Figure Button is a key button of the remote. If you press the Android button once, the motion sensing of the remote shall stop, if you double click on the Android button, only then the Motion sensor will work freely. So, to use the motion sensor, you need to double click on the Android button and then try the motion sensor. The typing of the keys of the remote depends on where you want to type. Some Browsers and applications support the remote, while some do not. This is completely based on the application you download and remote control.
- The right and left click keys on the sides of the android key are also important keys. The left click key is used to select, while the right click is used to exit and go to the previous menu.
- This is a motion sensor remote. It requires more battery than a normal remote. Use only good and fully charged battery in the remote for good functioning.

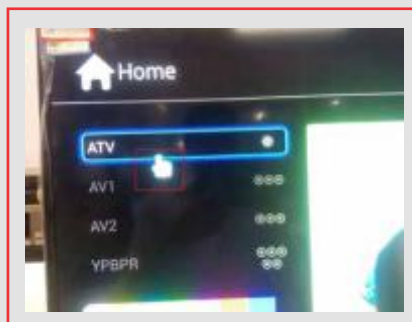

So, you can type, you can browse and you can play through the motion sensor remote control device. All you need to follow the various points to make sure the remote can function well. For any assistance, call the NVY Toll Free Number at 1800 425 1800 and our customer service executive will guide you.